
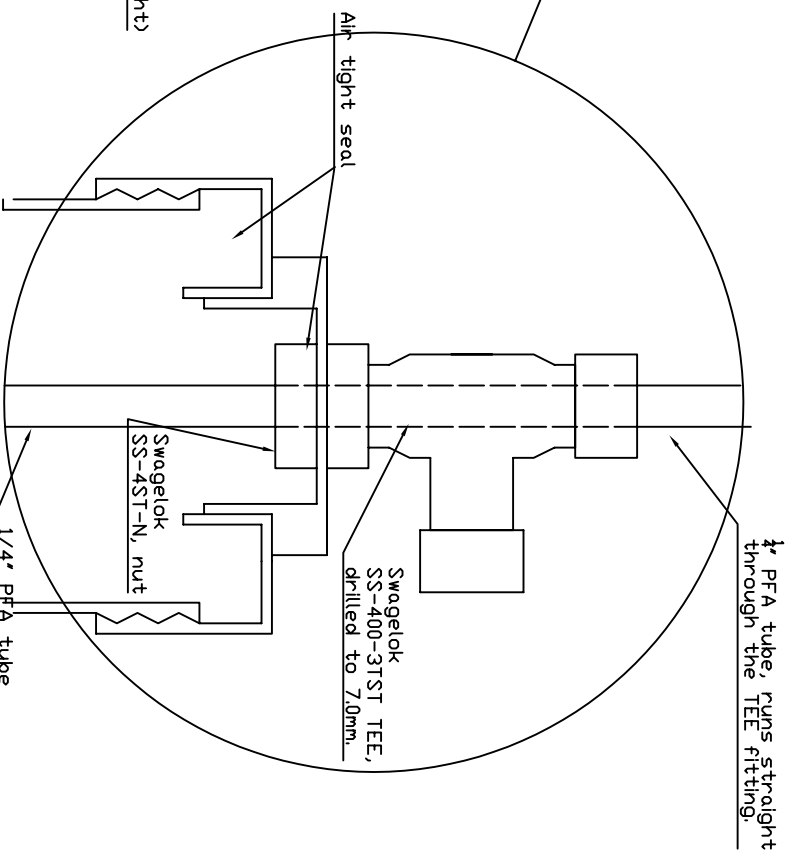


1. CUT TUBE TO LENGTH FOR THE BASE CONTAINER BEING USED.
2. ATTACH THE WEIGHT TO THIS SO THAT IT SITS AT THE BOTTOM OF THE CONTAINER AS SHOWN
3. THE TEE FITTING MUST FORM AN AIRTIGHT SEAL WITH THE CAP.
4. THE CO2 FILTER MUST BE CONNECTED TO THE TEE AS SHOWN.
5. DO NOT DRILL A HOLE IN BASE CONTAINERS CAP.

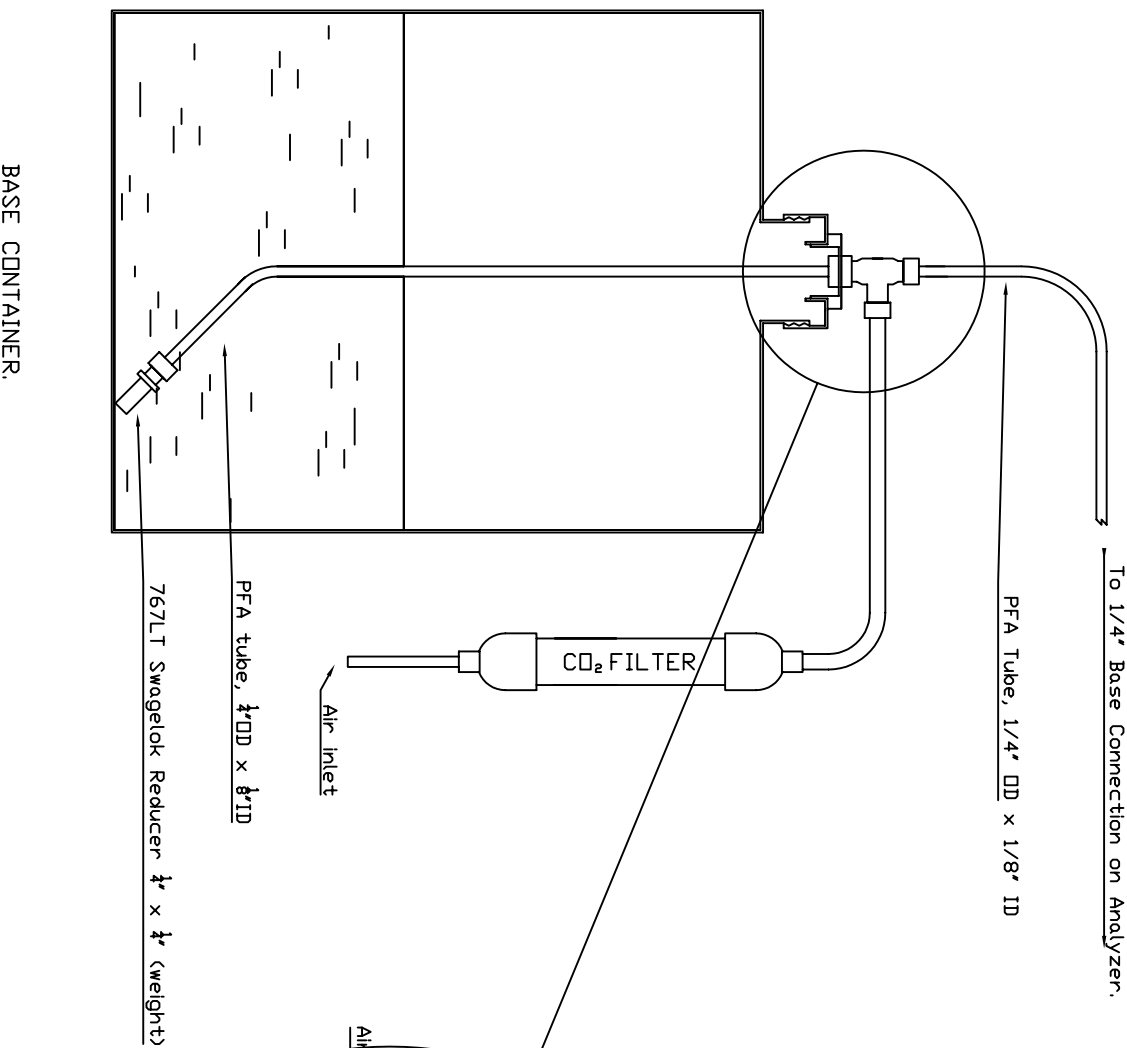

DETAIL OF CAP.

REV.	DETAILS	DATE	SCALE: N.T.S.
x1	ECD 0080	16/1/12	DATE: 25-Sep-08
			DR.BY: IDM
			CHKD.BY: SDM
			VERSION: x1

PROJECT: BIOTECTOR	
DWG. TITLE: BASE CONTAINER CONNECTIONS	
FOR FLEXIBLE TUBE 1/4"	
DWG. NO: 81104612.DWG	