



Item code: 19-BSS-001
 Include all fittings, tubes and filter
 shown on the drawing

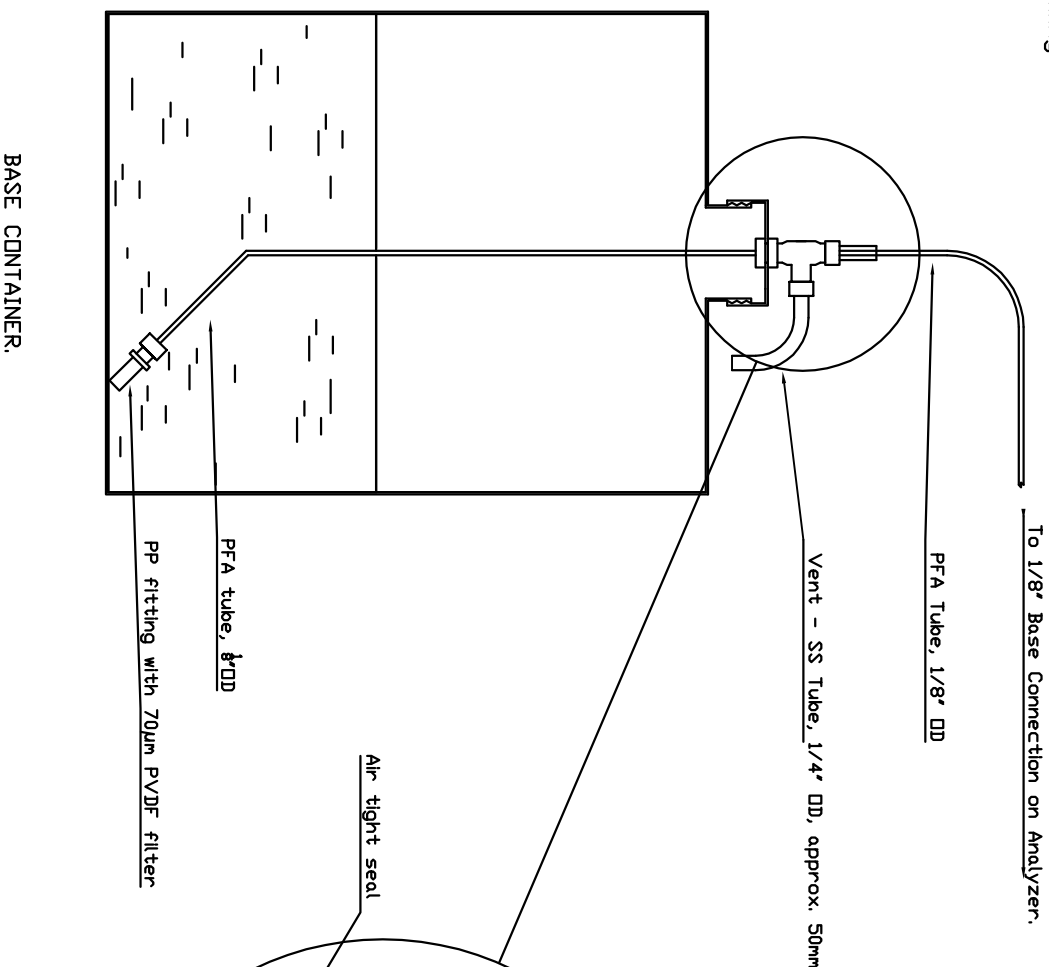

BASE CONTAINER.

1. CUT THE TUBE TO LENGTH FOR THE ACID CONTAINER BEING USED.
2. ATTACH THE FILTER TO THE DIP TUBE SO THAT IT SITS AT THE BOTTOM OF THE CONTAINER AS SHOWN.
3. THE TEE FITTING MUST FORM AN AIRTIGHT SEAL WITH THE CAP.
4. DO NOT DRILL A HOLE IN ACID CONTAINER'S CAP.

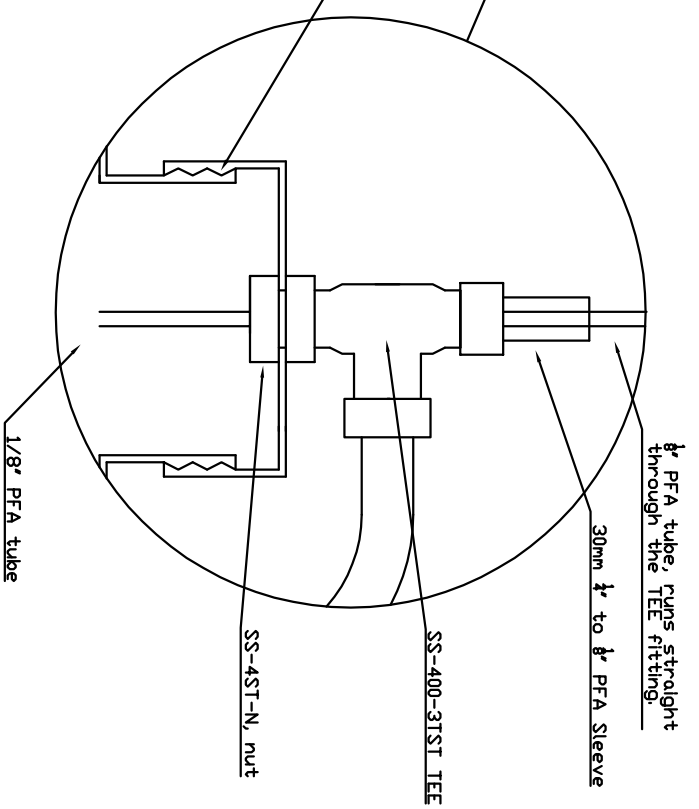

DETAIL OF THE CAP.

REV.	DETAILS	DATE
x1	First Issue ECD0081	16/1/12
x2	ECD0261	23/1/12



PROJECT: BioteCtor System-C		SCALE: N.T.S.
DWG. TITLE: Acid dip tubes		DATE: 16/1/12
DWG. NO: 81105001_1		DR BY: SOM
		CHKD BY: MP
		VERSION: x2